

Technical Letter


BOOK NO. 559M

TRIPLE TIME ZONE 3M00

YOUR NEW WATCH FEATURES THE FOLLOWING FUNCTIONS:

- A. Time display with hours, minutes and seconds.
- B. Date Hand.
- C. Triple Time Zone display.

As you read the following instructions, please refer to the illustrated diagram below, which shows the functions of this watch.

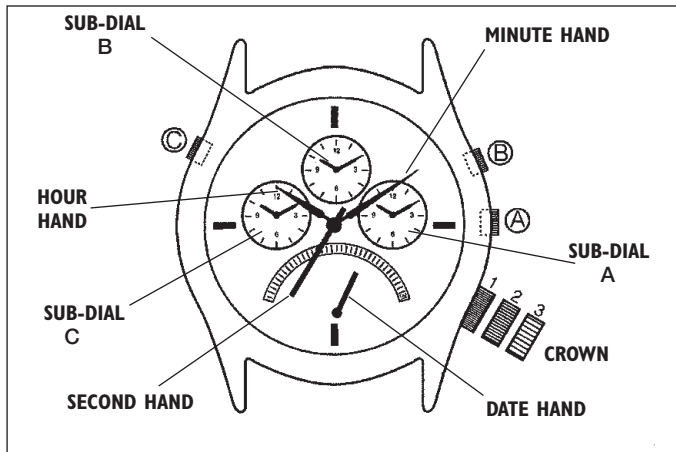

A. SETTING THE TIME

1. Pull the crown out to position "3" and turn the hands clockwise until the date changes at approximately midnight.
2. Continue to the correct time if it is AM (morning).
3. For PM (afternoon) time, continue past 12 noon and keep turning until the correct time is reached.
4. Push the crown back to position "1".

NOTE: The hands in each of the sub-dials will move in synchronization with the large hands. This is normal. They are re-set separately when needed.

B. SETTING THE DATE

1. Pull the crown out to position "2" and turn the crown toward you until the correct date is indicated by the date hand.
2. Push the crown back in to position "1".

NOTE: Do Not set the date as above between the hours of 7:00 PM and 1:00 AM. This may cause the date to be incorrect and the date will have to be reset later.

C. SETTING THE TIME ZONE SUB-DIALS

1. Each set of small hands in the three small sub-dials can be adjusted to a different Time Zone for a total of four different time indications if needed.
2. Look at the above Illustrated Diagram. Each sub-dial: "A", "B" and "C" has a corresponding RECESSED push button labelled: "A", "B" and "C".
3. To set any sub-dial to a desired Time Zone, simply push the RECESSED button, using a ball point pen tip or equivalent tool, and the hour hand on the selected sub-dial will jump back one hour. Simply repeat until the desired Time Zone time is set.